

Cuisinart®

COMPACTMAX™ PRO 8L AIR FRYER

AFS8TSSSAE



Instruction Booklet



Follow us @cuisinart_southafrica



For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.

CONTENTS




Important safeguards	2
Special cord set instructions	4
Before first use	4
Operating your air fryer	4
Getting to know the control panel	5
Air Frying tips & hints	5
Troubleshooting	6
Cleaning and maintenance	6
Warranty	7

IMPORTANT SAFEGUARDS

When using an electrical appliance, especially when children are present, basic safety precautions should always be taken, including the following:

1. **Read all instructions.**
2. **UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING. Allow to cool before cleaning, handling, or putting on or taking off parts.**
3. Do not touch hot surfaces. Use handles or knobs.
4. To protect against electric shock, do not place cord or plugs or the main body of the Air Fryer in water or other liquids. See Cleaning and Maintenance.
5. This appliance should not be used by or near children or individuals with certain disabilities.
6. Do not operate any appliance with a damaged cord or plug, after the appliance has malfunctioned or has been dropped or damaged in any way, or is not operating properly. Return the Air Fryer to the store or retailer where purchased for examination, repair, or adjustment.

7. The use of accessory attachments not recommended by Cuisinart may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over the edge of the table or countertop, where it could be pulled on inadvertently by children or pets, or touch hot surfaces, which could damage the cord.
10. Do not place the Air Fryer on or near a hot gas or electric burner or in a heated oven.
11. Do not use this Air Fryer for anything other than its intended purpose.
12. Extreme caution should be exercised when using containers constructed of materials other than ovenproof metal or glass in the Air Fryer.
13. To avoid burns, use extreme caution when removing Air Fryer accessories or disposing of hot grease.
14. **When not in use, always unplug the unit.** Do not store any materials other than manufacturer's recommended ovenproof accessories in this Air Fryer.
15. Do not place any of the following materials in the Air Fryer: paper, cardboard, plastic, and similar products.
16. Do not cover any part of the Air Fryer with metal foil. This will cause the unit to overheat.
17. Oversize foods, metal foil packages, and utensils must not be inserted in the Air Fryer, as they may create the risk of fire or electric shock.
18. A fire may occur if the Air Fryer is covered or touching flammable materials such as curtains, draperies, or walls when in operation. Do not store any items on top of the appliance when in operation. Do not operate under wall cabinets unless there is 100mm space around air fryer.
19. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating the risk of electric shock.
20. Do not attempt to dislodge food when the Air Fryer is plugged into an electrical outlet.
21. **WARNING:** To avoid possibility of fire, NEVER leave the Air Fryer unattended during use.
22. Use recommended temperature settings for all air frying.
23. Do not rest cooking utensils or baking dishes on the window or on top of the unit.

24. Press  after use to turn off the Air Fryer.
25. Do not operate your appliance in an appliance garage. When storing in an appliance garage, always unplug the unit from the electrical outlet. Not doing so could create the risk of fire, especially if the appliance touches the walls of the garage, or the door touches the unit as it closes.
26. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
27. To disconnect, press  to turn off, then remove plug from wall outlet.
28. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
29. If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid a hazard.
30. The appliance is intended for household use and not applications such as:
 - Staff kitchen areas in shops, offices, and other working environments
 - Farmhouses
 - By clients in hotels, motels, and other residential type environments
 - Bed and breakfast type environments
31.  This symbol means: The surface of this product is hot; please be careful when touching it.
32. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
33. Do not use this appliance for deep-frying.
34. Intended for worktop use only. Do not move the appliance when in use.
35. Prevent food contact with heating elements. Do not overfill when cooking. Overfilling may cause personal injury or property damage or affect the safe use of the appliance.

36. Any adjacent furniture must be able to withstand a minimum temperature rise of 85°C above the ambient temperature of the room it is located in, whilst in use. This appliance requires 100mm clearance around the front, top, back and sides of the appliance. Certain types of vinyl or laminate kitchen furniture are particularly prone to heat damage or discolouration at temperatures even below the guidelines given above. Any damage caused by the appliance being installed in contravention of these instructions will be at the liability of the owner. You should not use this appliance to store items on or as work surface. Do not use the appliance near or under combustible materials like curtains or furniture.
37. Check all parts before use. If any part is damaged 'DO NOT USE'

CAUTION: BURN HAZARD



WARNING: very hot surfaces.


Take care when using the oven, surface could be hot.

DO NOT TOUCH hot surfaces, as possible injury could occur.

The appliance must not be placed inside furniture or any built-in unit, when switched on and in use.

DISPOSING OF ELECTRICAL AND ELECTRONIC APPLIANCES AT THE END-OF-LIFE



The symbol  on the product or on the packaging indicates that this product may not be treated as household waste. Instead, it should be handed over to the appliance collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly you will help prevent potential negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

SAVE THESE INSTRUCTIONS

Please read and keep these instructions handy. These instructions will help you to safely operate your Cuisinart® Air Fryer and get the most out of it with consistent, professional results.

SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risk of someone tripping or becoming entangled. Extension cords may be used if caution is exercised in their use.

If an extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled by children or tripped over unintentionally.

FOR HOUSEHOLD USE ONLY NOT INTENDED FOR COMMERCIAL USE

BEFORE FIRST USE

1. Remove and discard any packaging material from the unit.
2. Remove all accessories and read the Instructions for use carefully. Please pay attention to the Important Safeguards, warnings and operating your air fryer sections to avoid any injury or damage.
3. Wash the drawers and crisper plates in hot, soapy water, then rinse and dry thoroughly. The drawers and crisper plates are the ONLY dishwasher safe parts. To extend the life of the drawers we recommend hand-washing. NEVER clean the main unit in the dishwasher.

4. Place your Cuisinart® Air Fryer on a flat, level surface. Move at least 100mm away from the wall or from any objects on the countertop. Do not use on heat-sensitive surfaces.

NOTE: OBJECTS SHOULD NOT BE STORED ON TOP OF THE AIR FRYER. IF THEY ARE, REMOVE ALL OBJECTS BEFORE YOU TURN ON YOUR AIR FRYER. THE EXTERIOR WALLS GET HOT WHEN IN USE. KEEP OUT OF REACH OF CHILDREN.

5. Plug power cord into the wall outlet.

OPERATING YOUR AIR FRYER

Follow these simple steps for cooking operation:

Place the Air Fryer on a stable surface

Place your air fryer on a flat, heat-resistant countertop. Plug the unit into a 220-240V power outlet. The unit will show a brief LED flash and sound a single beep to indicate it is in standby mode.

Insert the basket

Ensure the crisper plate is placed in the bottom of the basket.


Power on

Press the Power icon. The LED display will show "--:--" and the unit is ready for use.

Select cooking function

Select the cooking function. Adjust the temperature and cooking time as needed by tapping the Temp and Time icons and the + / - arrows. Select or deselect the shake reminder.



Start cooking

Press the  icon to begin cooking. The digital display will show the countdown timer (see info on preheat feature below).

End of cooking

When the timer reaches 00:00, the unit will beep to signal the end of the cooking cycle. The Keep Warm function will automatically activate.

START/STOP

Press the Start/Stop button () , or remove the basket to disable the Keep Warm function. Press the  button to turn off the unit. Unplug the unit when done.

GETTING TO KNOW THE CONTROL PANEL


1. Cooking functions

Select the desired cooking function based on your cooking method: Air Fry, Roast, Grill, Bake, Dehydrate or Max Crisp.


 
2. Time and temperature controls

When the temperature/time button is pressed, the +/- buttons will become visible, so you can make changes. Use the + and - buttons to adjust the cooking time and temperature for your selected function. The temperature can be adjusted in increments of 5°C, and the cooking time can be adjusted in 1 minute increments up to 1 hour.

3. Preheat feature

The Bake and Grill programs have a Preheat feature. To use it, select Bake or Grill, and then press the . The unit will begin preheating, and the display will show a scrolling rectangle symbol indicating the preheat process. Once preheating is complete, you'll hear a 5-tone beep. At this point, remove the basket, add your food, and return the basket to the unit. The cooking timer will then begin counting down. If the drawer is not opened, then the timer will start counting down after 3 minutes.


4. Start/Stop button ()

Press the Start/Stop button () to begin or end the cooking process. The unit will start cooking once the timer and temperature are set, and the Start/Stop button () is pressed. Tap it again to stop cooking. If you Stop cooking, the unit will cancel and reset. If you open the drawer without pressing Stop the cooking cycle will automatically pause until the drawer is closed.


5. Shake reminder

The Shake reminder alerts you to flip or shake your food halfway through cooking. This reminder will automatically activate for Air Fry and Max Crisp functions, but you can manually set it for any function (except Dehydrate). If you want to disable the reminder, simply press the Shake reminder button again to turn it off (so button stops flashing). This must be done before you start the cooking program. When the reminder activates, you will hear an audio alert.

6. Ready indication

When the cooking time has finished, the unit will sound three beeps, and the display will show 00 for 1 minute. After that, the air fryer will automatically enter Keep Warm mode, unless the basket is removed or  is pressed.

7. Auto keep warm

The Keep Warm function begins automatically at the end of any cooking cycle to keep your food warm for up to 60 minutes. If the basket is removed or  is pressed, the unit will exit Keep Warm mode. Keep Warm can also be used to reheat food. Select basket, push Keep Warm and then start the program.

8. Max crisp

Max Crisp is a high-temperature setting designed to get your food crispy in 30 minutes or less.

9. Favorite (FAV) Buttons

Favourite buttons (FAV.1 or FAV.2) have a default setting of 180°C for 20 minutes. To customise, select the Fav button and adjust the temperature and time settings. Then press and hold the FAV button for 3 seconds to save the settings. To restore the factory defaults, press and hold both FAV.1 and FAV.2 buttons for 2 seconds until you hear a beep.

AIR FRYING TIPS & HINTS

Air frying is a healthy alternative to deep-frying in oil. A high-velocity fan and an upper heating element circulate air to prepare a variety of foods that are both delicious and healthier than traditional fried foods.

- Air frying doesn't require oil, but a light coating of cooking spray or drizzle of oil tossed with food can enhance browning.
- Shake Reminder is recommended when cooking large quantities that overlap and larger foods. Do not overload the basket; more surface area will result in faster cooking and better results.
- Foods will cook more evenly when they are cut into equal-size pieces with minimal overlap.
- An assortment of coatings can be used on air-fried foods. Some examples of different crumb coatings include breadcrumbs (plain, seasoned, and panko), crushed cornflakes, potato chips, and crackers.
- When cooking proteins, marinades and juices will drip to the bottom of the basket. This is a great base for a gravy or pan sauce.
- When air frying greasy foods (e.g., bacon), grease will drain into the bottom of the air fry basket. As a precaution, allow hot grease to cool in the basket before cleaning.
- Use tongs or a silicone spatula to remove food from the basket.

TROUBLESHOOTING

Operation	Why won't my unit turn on?	Make sure your unit is plugged into a functional outlet.
		Make sure the air fryer basket is securely in place in the unit.
Cooking	Why are fried foods not crispy or fried evenly?	Some foods may require more oil than others. If not crispy enough, lightly spray, brush, or rub more oil on the food.
		Make sure food is spread evenly in a single layer in the air fryer basket with no overlap. If food still overlaps, toss or flip food halfway through cooking cycle; use the Shake Reminder for an audio alert.
		Put the food in for additional cooking time. Make sure to check frequently until food reaches desired brownness.
	Why is my food undercooked?	If you put too much food in the basket, it may not cook in the suggested time. Try using smaller batches of food and single layers, rather than stacking food items on top of each other.
If the temperature is too low, the food may not fully cook.		
Cleaning	How do I clean tough-to-remove food residue from the basket/crisper plate?	To remove baked-on grease, soak the accessories in hot, soapy water or use a nonabrasive cleaner. We recommend hand-washing these parts in hot, soapy water with a nylon scouring pad or nylon brush and then thoroughly rinsing them, or washing in a dishwasher.

CLEANING AND MAINTENANCE

- Always unplug the air fryer from the electric outlet and allow it to cool completely before cleaning.
- Do not use abrasive cleaners, as they will damage the finish. Simply wipe the exterior with a clean, damp cloth and dry thoroughly. Apply the cleansing agent to a cloth, not directly onto the Air Fryer, before cleaning.
- To clean interior walls, use a damp cloth and a mild liquid soap solution or a spray solution on a sponge. Remove any residue from cleaners with a clean, damp rag. Never use harsh abrasives or corrosive products, these could cause damage the Air Fryer surface . Never use steel wool pads on interior of the Air Fryer.
- Air fry baskets and crisper plates are dishwasher safe. They can also be hand-washed in hot, soapy water with a nylon scouring pad or nylon brush and thoroughly rinsed.
- Remove the crisper plate from the air fry basket to easily access the bottom of the air fry basket.
- Any servicing should be performed by an authorised service representative.

WARRANTY

Limited Warranty

Spindel (Pty) Ltd (SP) warrants this appliance to be free from defects in workmanship and material, under normal residential use, for a period of 36 months (3 years) from date of purchase.

This warranty only extends to the original purchaser. Proof of original purchase date and, if requested by SP, return of your appliance for assessment, is required to obtain service under this Limited Warranty.

This warranty is limited to the repair or replacement of any defective part of the product, without charge, where failure occurs under normal working conditions (as outlined in this manual) and within the 36 month (3 year) warranty period. Any claim under warranty will not result in an extension of the warranty period; save that every new or repaired part installed under warranty will be covered by the warranty for a further 3 months after installation.

This warranty is subject to the following conditions:

1. SP shall not be responsible for damages resulting from fire, flood, civil disturbance, or any act of God. The Company shall not, in terms of these warranties, be responsible nor held liable for any consequential loss or damage of any kind caused by or due to the failure or malfunction of the appliance.
2. Excluded from this warranty are damages caused by abuse or misuse in conflict with the operating instructions, connection to the incorrect voltage or if the product has been subject to commercial use. Damage resulting from accident, alteration, misuse, abuse, neglect, unreasonable use, use contrary to the operating instructions, normal wear and tear, improper assembly, disassembly, failure to provide reasonable and necessary maintenance, or repair by anyone unless directed by SP.
3. This warranty will be rendered invalid if:
 - a. Any product modifications or repairs are attempted by any persons or with any substitute parts not duly authorised by SP.
 - b. The serial number of the appliance has been removed.
 - c. The product is purchased or used beyond the borders of the Republic of South Africa.
4. If a service is requested under warranty and no fault or defect can be found, all costs will be for the purchaser's account.
5. This warranty will no longer be valid if any information in the certificate or sales invoice has been deleted, obscured or amended in any way.

SP is not responsible for shipping costs related to warranty service, save and except for shipping costs associated with the return of your appliance as provided herein.

WARRANTY

Limitation and Exclusions

The liability of SP, if any, for any allegedly defective appliance or part shall in no circumstances exceed the purchase price of a comparable replacement appliance.

IMPLIED WARRANTIES, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW. YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. SP SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE APPLIANCE OR DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, PERSONAL INJURY, LOSS OF PROPERTY, LOSS OF REVENUES OR PROFITS, LOSS OF ENJOYMENT OR USE, COSTS OF REMOVAL, INSTALLATION OR OTHER CONSEQUENTIAL DAMAGES OF WHATSOEVER NATURE.

Warranty Service

To obtain service under this warranty:

- Call +27 (0) 860 555 135
- Or email info@cuisinart.co.za

www.cuisinart.co.za



Follow us @cuisinart_southafrica

Cuisinart is distributed in South Africa
by Spindel (Pty) Ltd

For further information or support
please contact Customer Care on:

info@cuisinart.co.za
0860 555 135